



## **RURAL MEAT SAW REPLACE TOP BEARING BLOCK**

1. Before removing the old top bearing, take note of the distance the pulley is away from the frame of the saw.
2. With a 3/16<sup>th</sup> Allen key undo the grub screw in the centre of pulley and remove the pulley.
3. On the back of the saw undo the 4 screws with the same 3/16<sup>th</sup> Allen key and remove cover .
4. With a pair of multigrips, unscrew the zinc adjuster rod out of the old block and remove block.
5. Replace new block in the space from the back of the saw and screw new rod down into the block until firm and place clear plastic cover over the front of the block.
6. Replace pulley back into position on the shaft at the same distance as before.
7. Replace cover plate on back of the saw.

## **RURAL MEATSAW REPLACE BOTTOM BEARING**

This really is just tap out the old bearing and gently tap in the new bearing.